

Statements of Camera Details:

Poto1





- ◎ USB Video Port: video output, Standard USB2.0 (Support YUV and MJPG)
- ◎ IR Receiver: IR Remote Signal receiver, please avoid place object in front of receiver.
- ◎ DC Power Plug: DC 12V power plug, please use our standard power adapter.
- ◎ RS-232: can be used for remote control camera pan-tilt-zoom, include RS232C VISCA IN and OUT. VISCA IN is designed for receive control signal, VISCA OUT is designed for signal amplification and transmit to the next device, by this can control several devices.

* VISCA IN:

2-->Visca RS-232 In

  
Number	Function	Number	Function
1	DTR-In	5	RXD-In
2	DSR-In	6	GND
3	TXD-In	7	N C
4	GND	8	N C

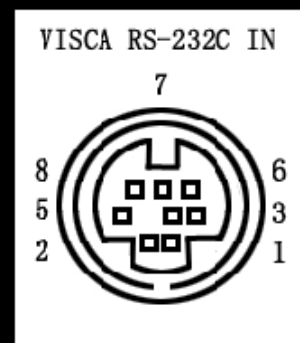

* VISCA OUT:

3-->Visca RS-232 OUT


Number	Function	Number	Function
1	DTR-In	5	RXD-In
2	DSR-In	6	GND
3	TXD-In	7	N C
4	GND	8	N C

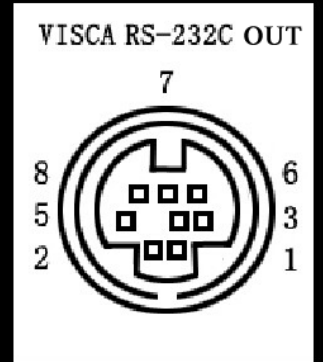 

© RS-422/485: 485/422 signal input and output interface, Same like RS-232, designed for camera remote control.

Definition of wiring as below:

1	In 485A
2	In 485B
3	Out 485B
4	Out 485A
5	GND

 

VISCA RS-422

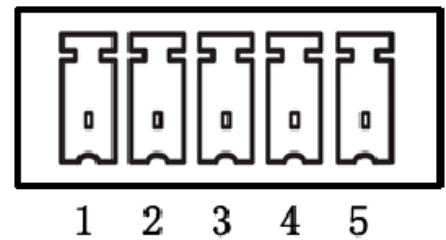 


Photo2



Power IR Signal Receiver Signal Receiver Indicator

IR Remote



1、POWER: Camera ON/OFF。

2、DATA SCREEN: IF the camera with OSD menu, this button can open the Menu。

3、Camera Select for IR Remote: Support 4 cameras controlled by IR Remote in the same space with out interference。

4、Preset Position 0-9: support set/call preset position, totally 10 preset positions。Call Preset Position: Press the Number button of position。Set Preset Position: Press PRESET, and press a Number button within 10 seconds。

5、Function Keys: ESC、MENU、ENTER, these 3 buttons are used for change the parameters of the camera through OSD menu, only useful for cameras with OSD menu。

MENU: open the OSD Menu。

ESC: exit the OSD Menu。

ENTER: Confirm the parameter and exit the OSD Menu。

6、Focus: AUTO、FAR、NEAR、MANUAL。According to the requirement, you can choose Auto Focus and Manual Focus, FAR and NEAR will only function when Manual Focus。It is useless when Auto Focus。

7、PRESET: for setting preset position, see No.4 for details。

8、RESET: Camera Rest, camera will restart when press this button。

9、Direction Control: UP、DOWN、LEFT、RIGHT、HOME。
HOME, back to the home position, others for direction control。

10、IMG UP/DOWN: when ceiling the camera, press this button, video will upside down。

11、LEFT/RIGHT: Left/Right Mirror。

12、Zoom: 4 buttons, for optical zoom control, SLOW for slow optical zoom, FAST for fast optical zoom。

13、IMAGE FREEZE: Video image freeze when press this button。

14、BACK LIGHT: Open and close backlight compensation。

Packing List

HD Video Conference Camera	1 set
IR Remote	1 set
12V 2A Power Adapter	1 set
Ceiling Bracket	1 set
Screw	1 bag
RS-232 cable	1 piece (3m)
USB cable	1 piece (5m)